 



## 5 Troubleshooting

- Notes:
- Before troubleshooting, setup the PC's display as below.
    - Resolution: 1280 x 1024
    - H-frequency: 64 kHz
    - V-frequency: 60 Hz
  - If no picture appears, make sure the power cord is correctly connected.
  - Check the following circuits.
    - No raster appears: Function PBA, Main PBA, I/P PBA
    - 5V develop but no screen: Main PBA
    - 5V does not develop: I/P PBA
  - If you push and hold the " (Enter/Auto)" button for more than 5 seconds, the monitor automatically returns to the factory preset.


### 5-1 No Power

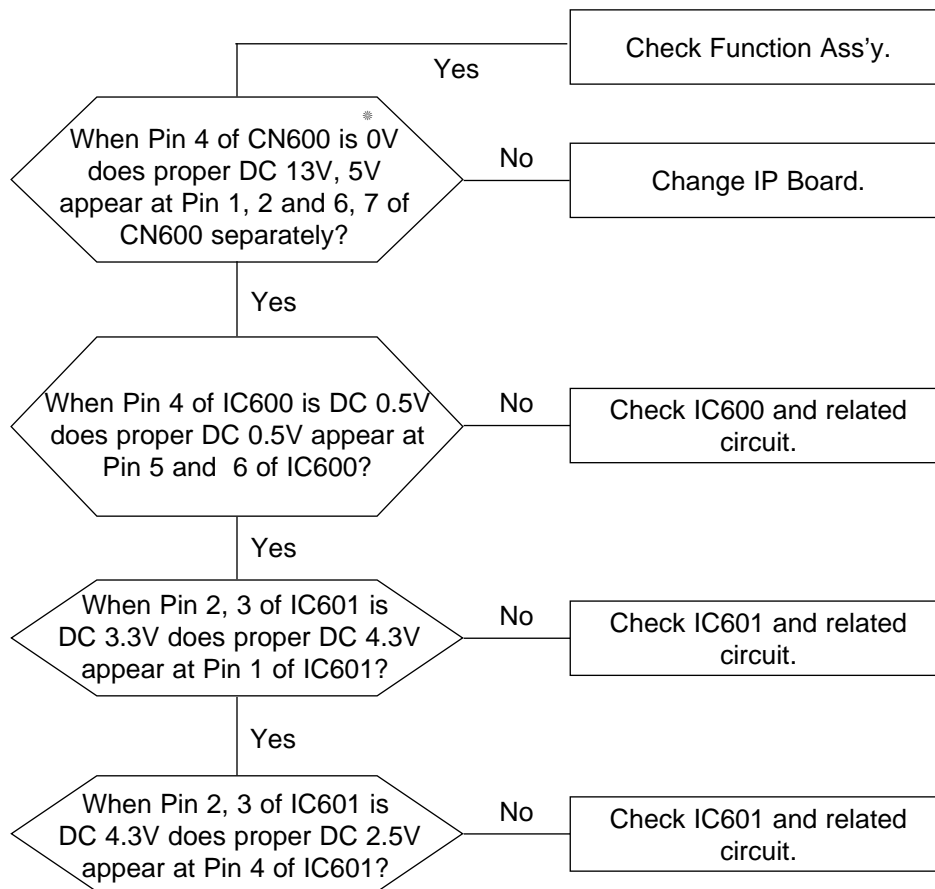

\* 0V means power on state.

When the monitor work well except DPMS and power switch off, 0V should be applied to number 4 of CN600.

## 5-2 No Video

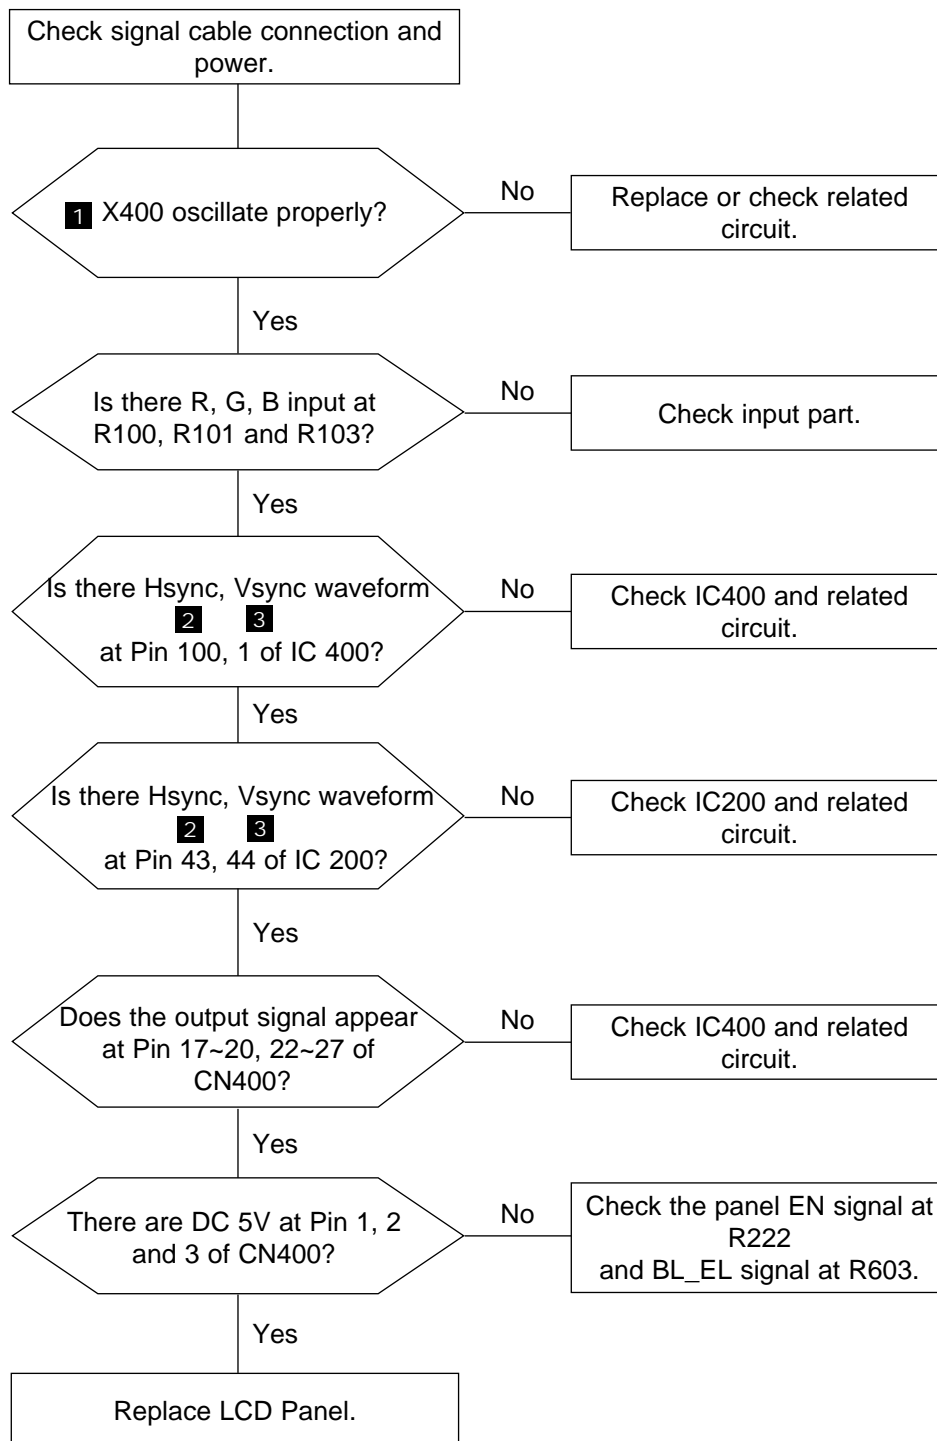

## WAVEFORMS

