

11 Disassembly and Reassembly

This section of the service manual describes the disassembly and reassembly procedures for the LME17DS/LME19DS TFT-LCD monitors.


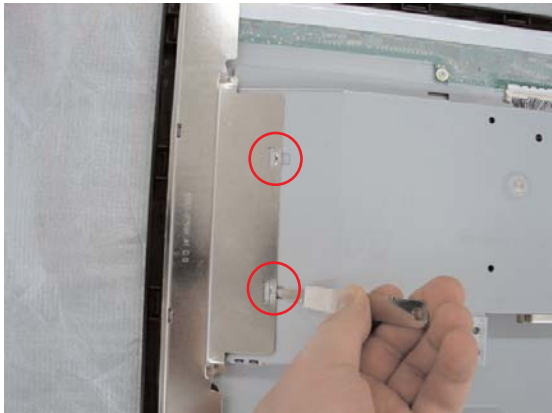
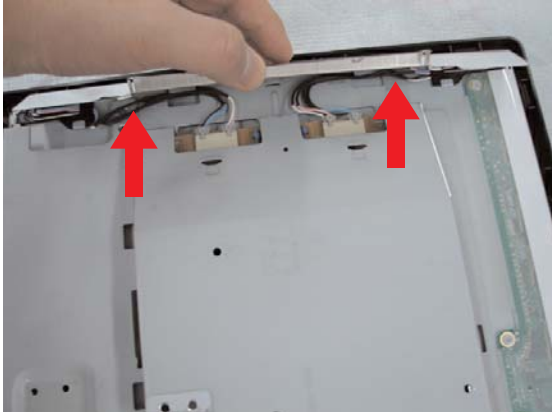
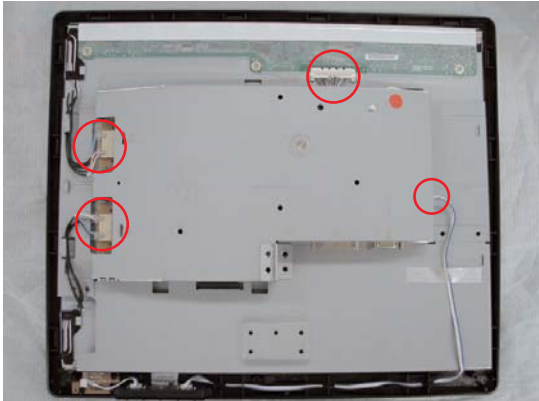
⚠ WARNING: This monitor contains electrostatically sensitive devices.
Use caution when handling these components.

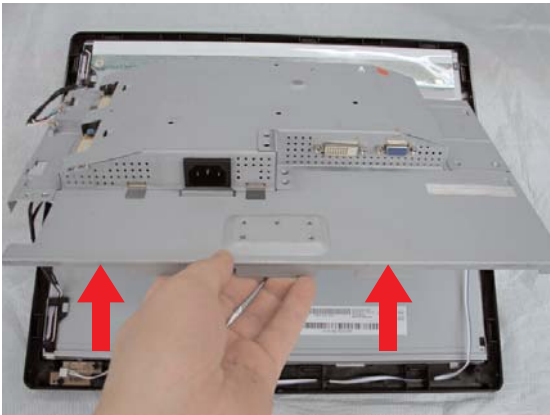


11-1 Disassembly

- ⚠ Cautions:**
- 1. Disassembly stand on the flat desk.
 - 2. Disconnect the monitor from the power source before disassembly.

Description	Picture Description
1. Place monitor face down on cushioned table.	
	

Description	Picture Description
<p>2. Remove 3 screws from the stand and Remove stand.</p>	 A photograph showing the rear of a monitor's stand. Three screws are circled in red, indicating they are to be removed. The stand is attached to the back of the monitor, which has a label with various certification marks.
	 A photograph showing the rear of the monitor. The stand is being pulled away from the back cover. Two red arrows point downwards from the base of the stand, indicating the direction of removal.
<p>3. Remove 3 screws from the stand and Lift up back cover.</p>	 A photograph showing the rear of the monitor. The back cover is being lifted up. Three screws are circled in red, indicating they are to be removed. The back cover has the 'SAMSUNG' logo on it.
	 A photograph showing the rear of the monitor with the back cover fully lifted. Two red arrows point upwards from the bottom of the back cover, indicating the direction of removal.

Description	Picture Description
<p>4. Use the jig to remove the shield lamp.</p>	
	
<p>5. Remove the shield lamp and Disconnect cables.</p>	
	

Description	Picture Description
<p>6. Lift up the shield and disconnect LVDS cable. Lift up the LCD panel.</p>	
	
	

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.