




11 Disassembly and Reassembly

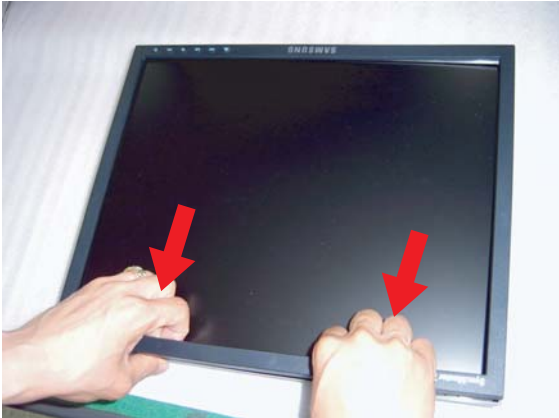
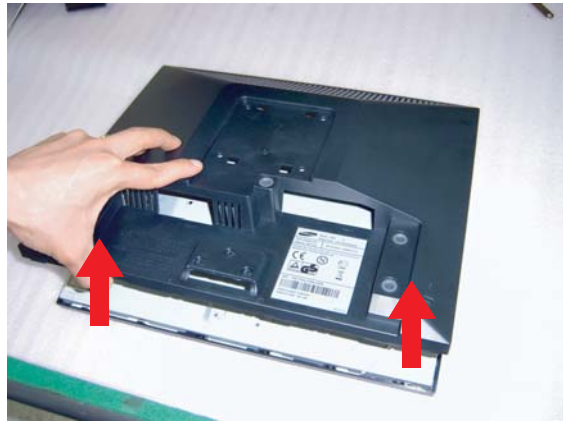

This section of the service manual describes the disassembly and reassembly procedures for the TFT-LCD monitors.

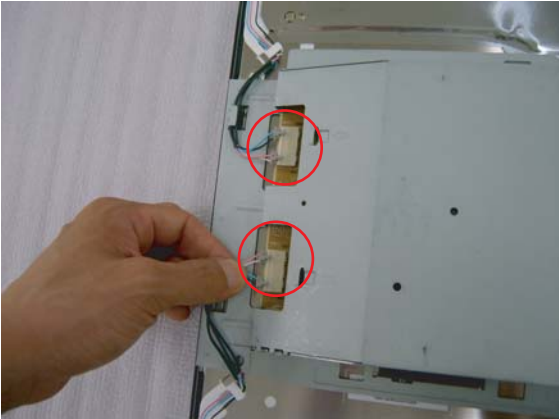

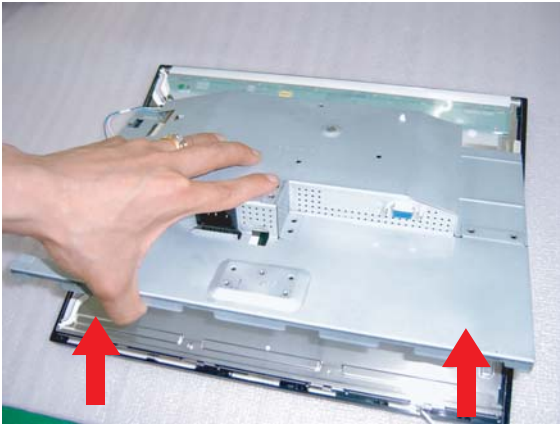

⚠ WARNING: This monitor contains electrostatically sensitive devices. Use caution when handling these components.


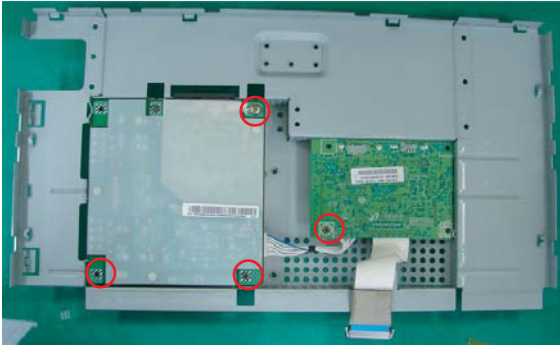


11-1 Disassembly (Simple - Stand)

⚠ Cautions: 1. Disconnect the monitor from the power source before disassembly.




Description	Picture Description
1. Place monitor face down on cushioned table. Lift up the sub-cover.	
2. Remove 3 screws from the stand.	
3. Remove stand.	

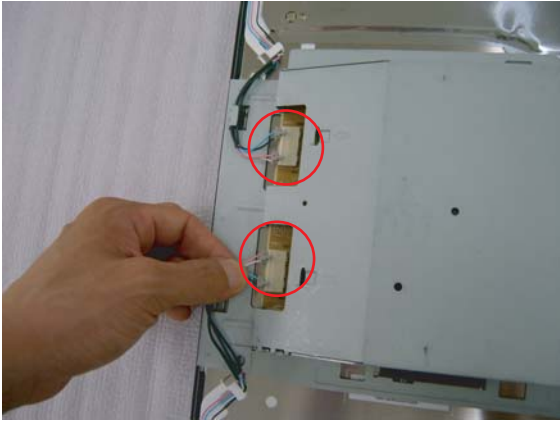
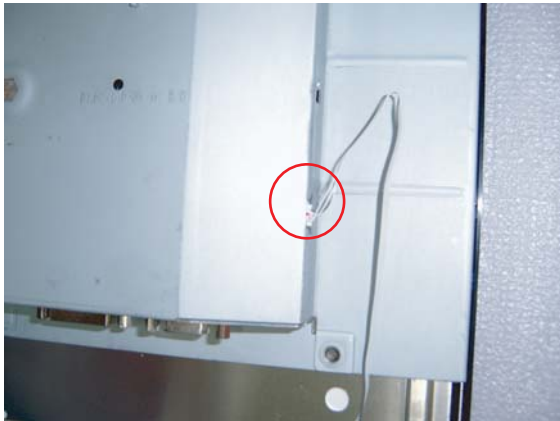
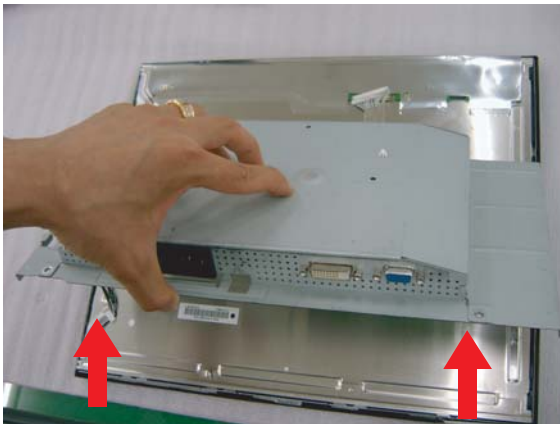

Description	Picture Description
<p>4. Remove front cover.</p>	
<p>5. Lift up the back cover and Use the jig to remove the shield lamp.</p>	 



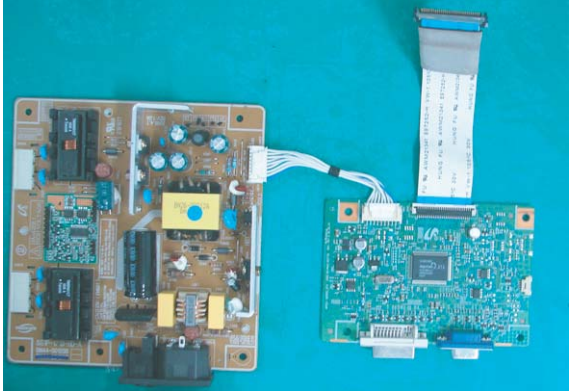

Description	Picture Description
6. Disconnect cables.	
	
7. Lift up the shield and disconnect LVDS cable.	
	

Description	Picture Description
8. Remove 4 screws.	
9. Remove 4 screws and Lift up the Main PCB and IB Board.	
10. Main PCB and IB Board.	
11. LCD Panel.	

11-2 Disassembly (HAS - Stand)

Description	Picture Description
<p>1. Place monitor face down on cushioned table. Remove 2 screws from the stand and remove front cover.</p>	
	
<p>2. Lift up the back cover and Use the jig to remove the shield lamp.</p>	
	

Description	Picture Description
3. Disconnect cables.	
	
4. Lift up the shield and disconnect LVDS cable.	
	

Description	Picture Description
5. Remove 4 screws.	
6. Remove 4 screws and Lift up the Main PCB and IB Board.	
7. Main PCB and IB Board.	
8. LCD Panel.	

11-2 Reassembly

Reassembly procedures are in the reverse order of disassembly procedures.