 



## 4 Troubleshooting


- Notes:
- Before troubleshooting, setup the PC's display as below.
    - Resolution: 1024 x 720
    - H-frequency: 45 kHz
    - V-frequency: 60 Hz
  - If no picture appears, make sure the power cord is correctly connected.
  - Check the following circuits.
    - No raster appears: Function PBA, Main PBA, I/P PBA
    - 5V develop but no screen: Main PBA
    - 5V does not develop: I/P PBA
  - If you select Brightness adjust menu and push the " (Enter/Source)" button for 5 seconds, the monitor automatically returns to factory reset.

### 4-1 No Power

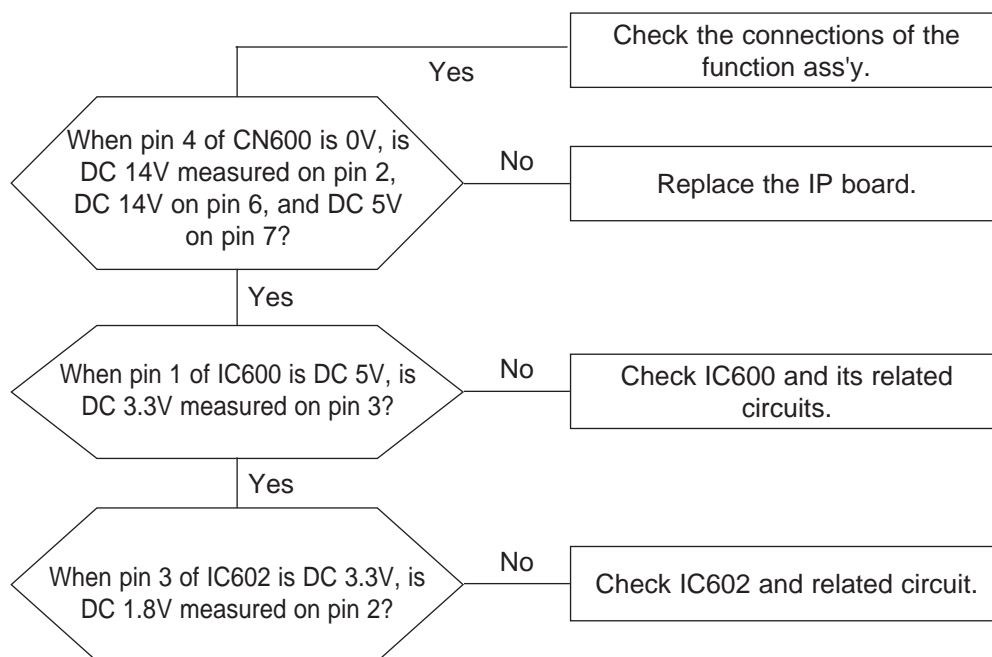





\* All locations of this page includes Main PBA.

## 4-2 No Video

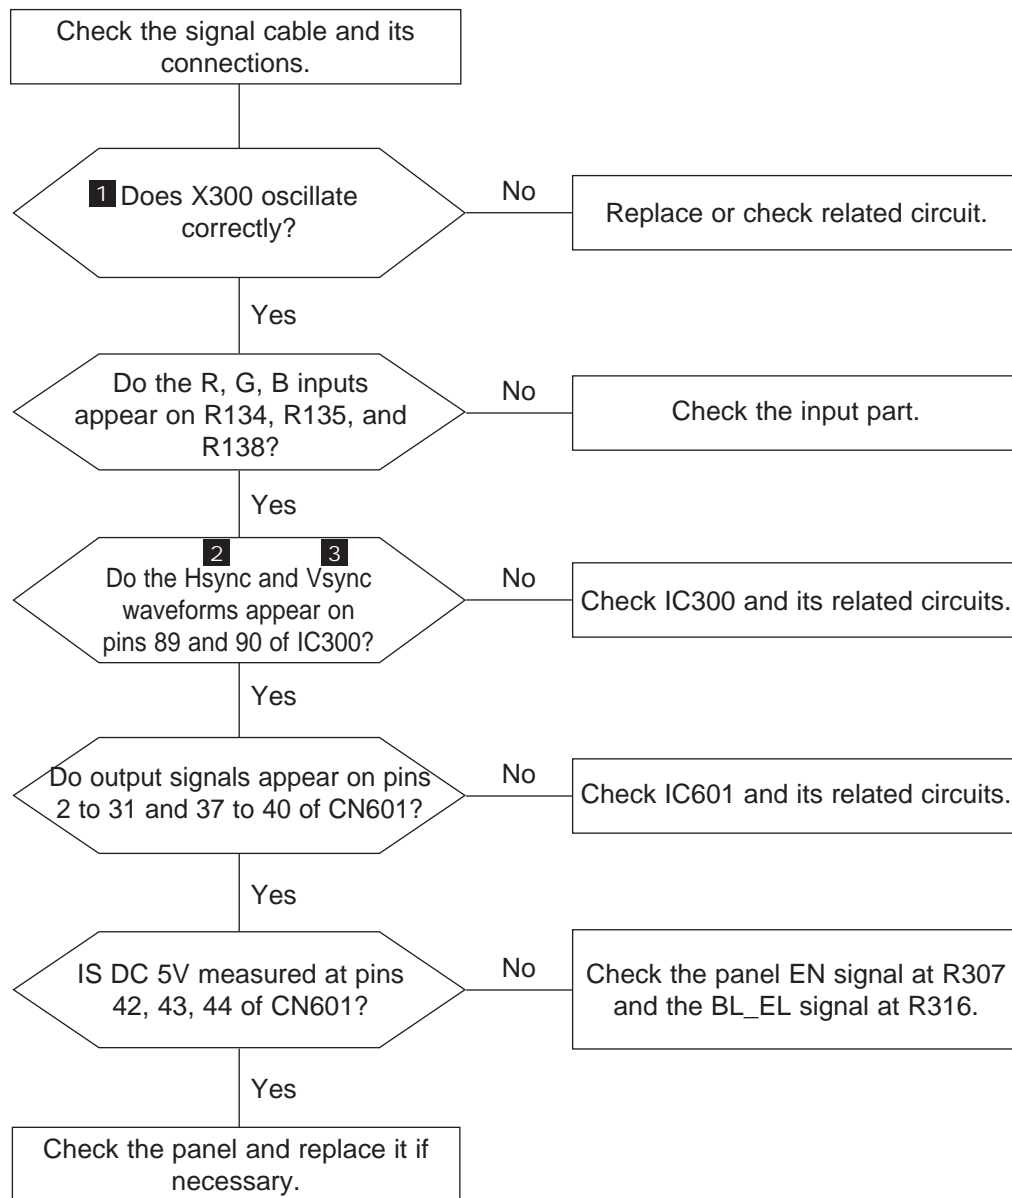

\* All locations of this page includes Main PBA.

## WAVEFORMS

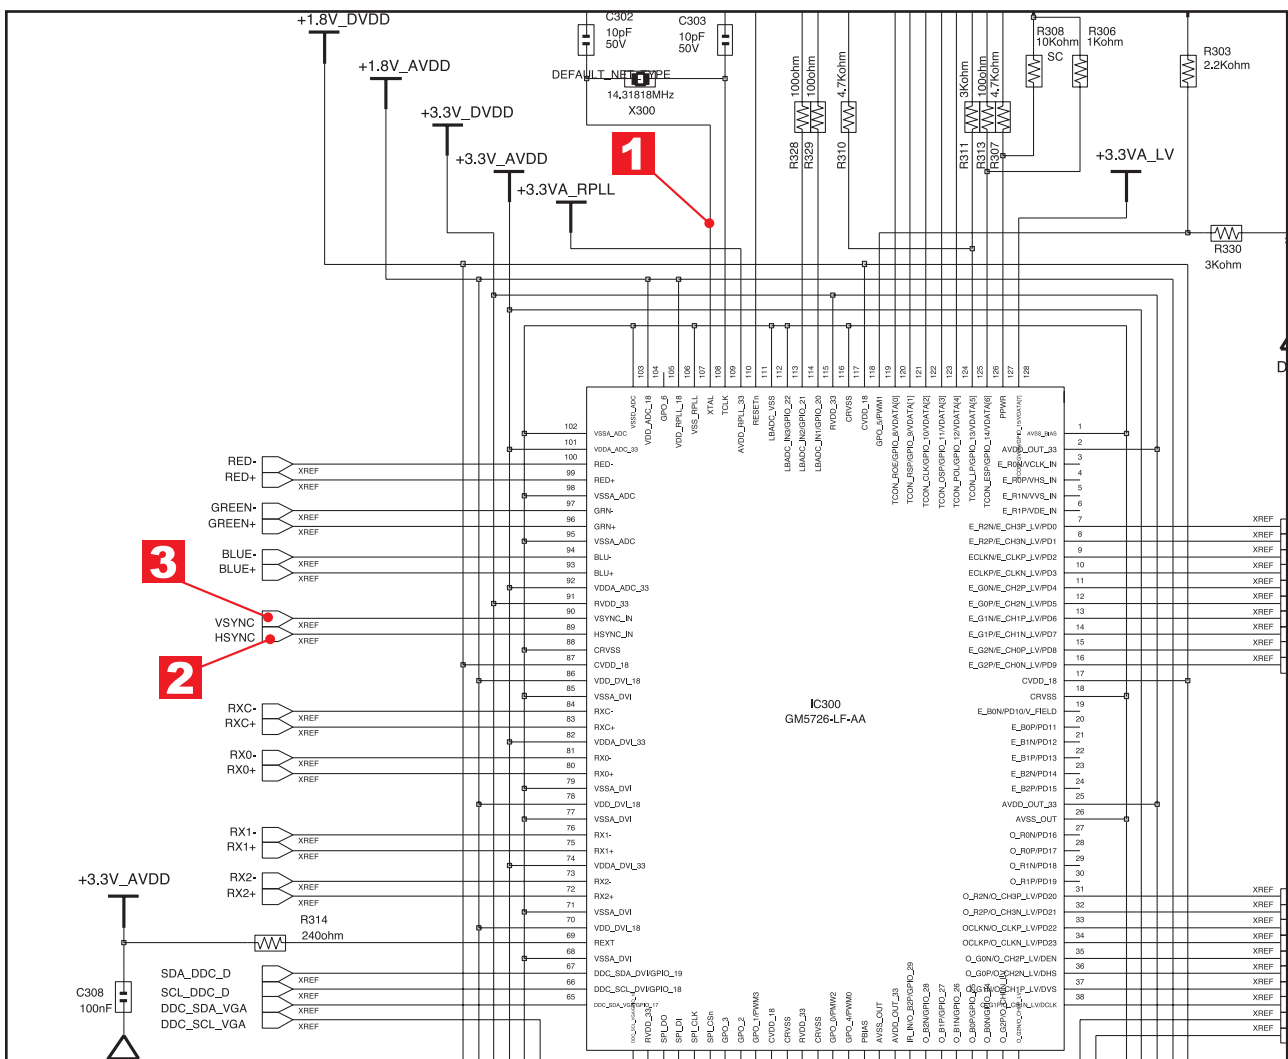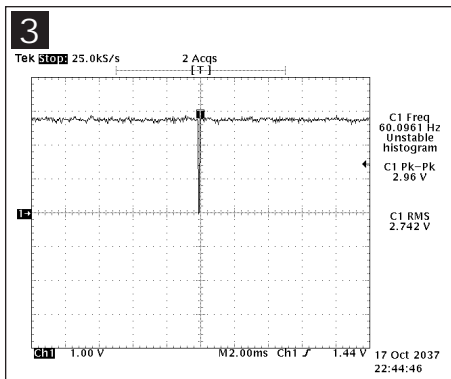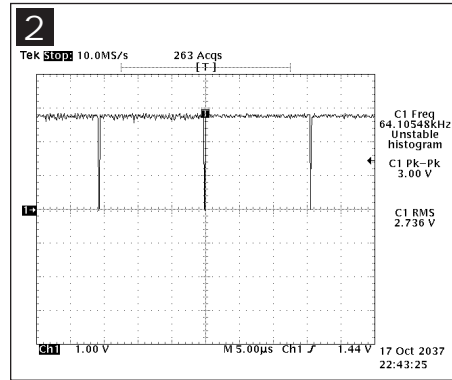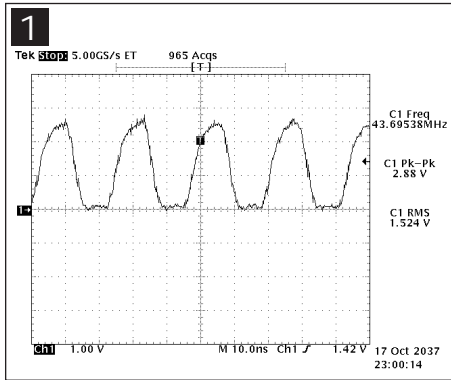

## Memo