


## 10 Operating Instructions and Installation

### 10-1 Front

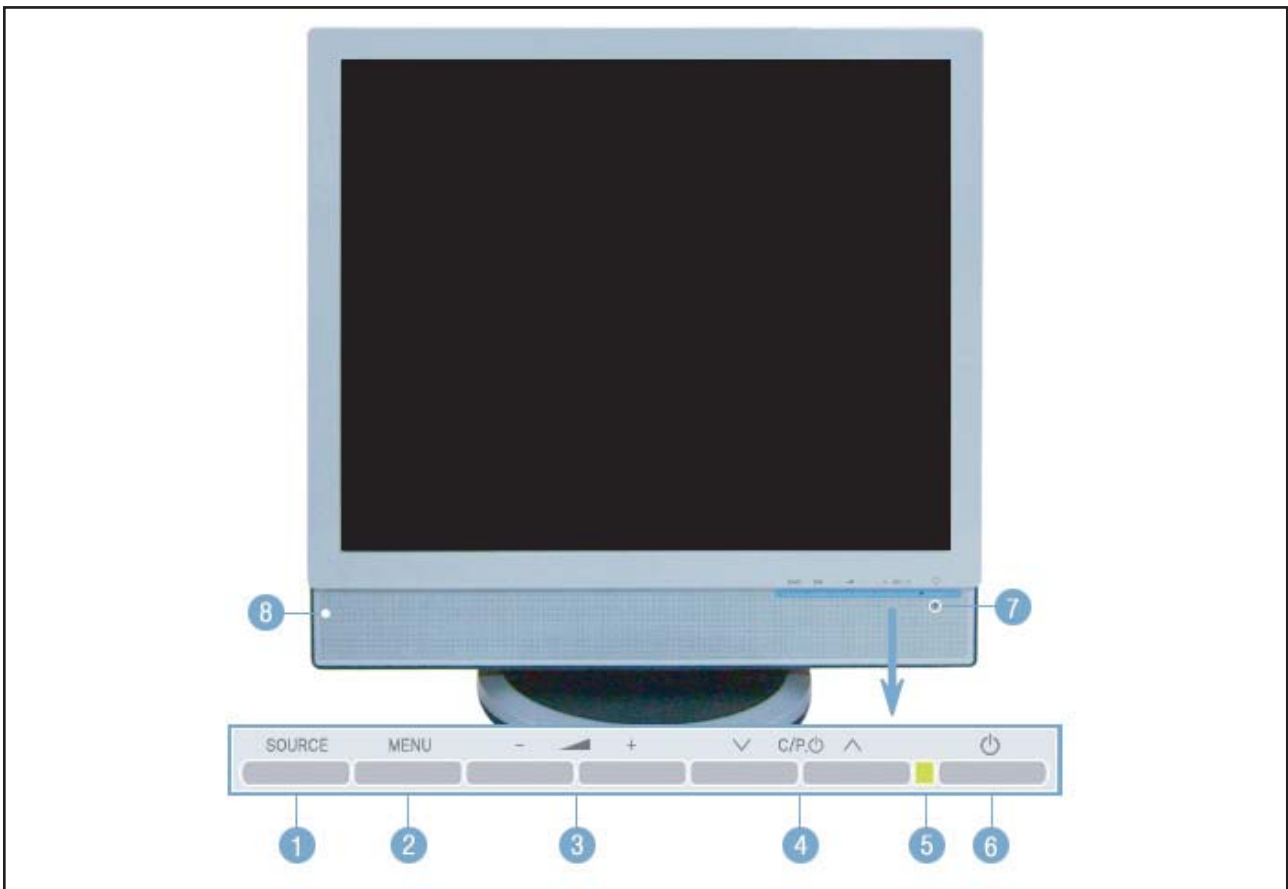

#### 1. SOURCE

Switches from PC Mode to Video mode.  
Changing the source is allowed only in external devices that are connected to the monitor at the time.

To switch Screen modes:

[PC] > [TV] > [Ext.] > [AV] > [S-Video]

#### 2. MENU

Use this button to open the on-screen menu and step back in the menu.

#### 3. — ◀ ▶ +

Moves from one menu item to another horizontally or adjusts selected menu values.

Adjusts the audio volume.

#### 4. ∨ C/P. ⏻ ▲

Moves from one menu item to another vertically or adjusts selected menu values.

In TV mode, selects TV channels.

#### 5. Power indicator

Power Indicator shows Power Saver mode by green blinking.

#### 6. [ ⏻ ] Power button

Use this button to turn the monitor on and off.

#### 7. Remote Control Sensor

Aim the remote control towards this spot on the monitor.

#### 8. Speaker

You can hear sound by connecting the soundcard of your PC to the monitor.

## 10-2 Rear



### 1. POWER

Power cord, plugs into monitor and wall receptacle. This product may be used with 100 ~ 240VAC (+/- 10%).




### 2. PC IN

Computer Connection Terminal (15 Pin D-SUB)



### 3. PC AUDIO IN

Audio Connection Terminal

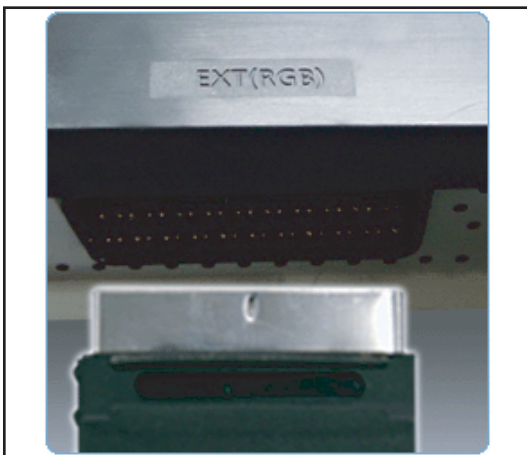

### 4. EXT(RGB)

External device terminal

EXT(RGB) is mainly used in Europe.

As for EXT(RGB) port of the monitor, it makes TV or Video signal input and output.



### 4. ANT IN

TV Connection Terminal



### 5. AV Connection Terminal

1. Headphone Connection Terminal (Output)
2. S-Video Connection Terminal (Input)
3. Video Connection Terminal (Input)
4. Right(R) / Left(L) audio Connection Terminal (Input)




### 6. Kensington Lock

The Kensington lock is a device used to physically fix the system when using it in a public place.  
(The locking device has to be purchased separately. )

For using a locking device, contact where you purchase it.

## 10-3 Remote Control

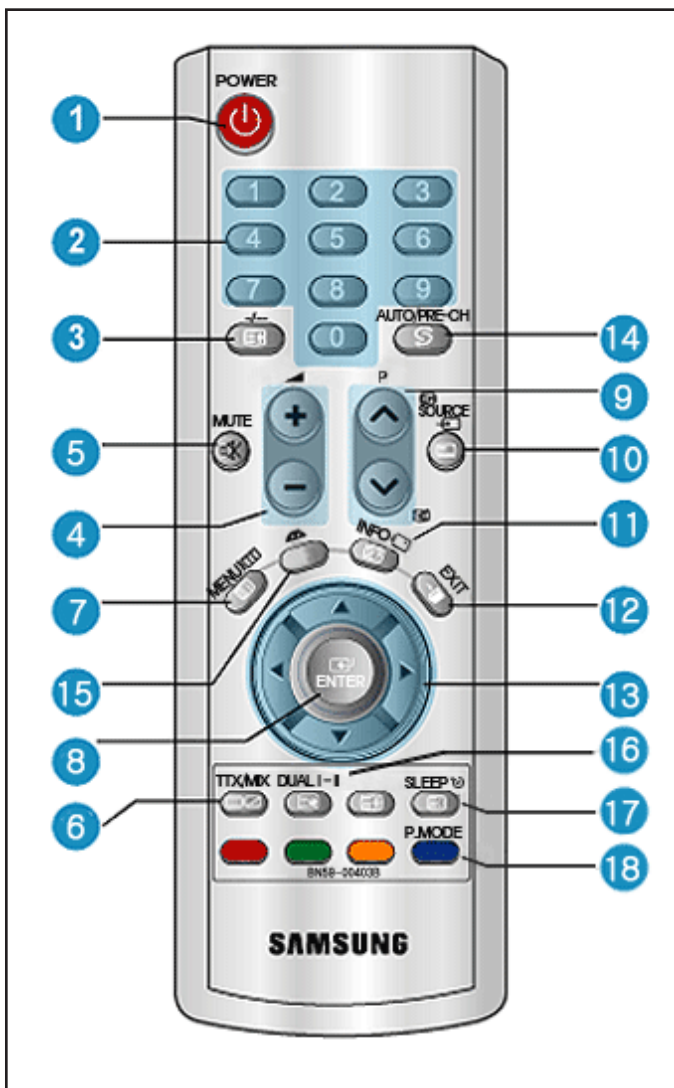

1. POWER
2. number buttons
3. TTX/MIX
4. - + (Volume)
5. MUTE
6. TTX/MIX
7. MENU
8. ENTER
9. ^ P v
10. SOURCE
11. INFO
12. EXIT
13. Up-Down Left-Right Buttons
14. AUTO / PRE-CH
15. ▲ (MagicBright+)
20. S.MODE
16. DUAL I - II
17. SLEEP
18. P.MODE

### 1. POWER

Use this button to turn the monitor on and off.

### 2. Number button

Selects TV channels in the TV mode.

You may use this button in PIP mode as well.

### 3. -/-- (One/Two-Digit CHANNEL selection )

Use to select a CHANNEL numbered ten or over.

Press this button, and the "--" symbol is displayed.

Enter the two-digit CHANNEL number.


### 4. — + (Volume)

Adjusts the audio volume.

### 5. MUTE

Pauses (mutes) the audio output temporarily.

Displays on the lower left corner of the screen.

The audio resumes if mute or —  + is pressed in the Mute mode.

### 6. TTX/MIX

TV channels provide written information services via teletext.

This function is available only in Europe.

### 7. MENU

Use this button to open the on-screen menu and exit from the menu screen or close screen adjustment menu.

### 8. ENTER

Activates a highlighted menu item.

### 9. P

In TV mode, selects TV channels.

### 10. SOURCE

Switches from PC Mode to Video mode.

Changing the source is allowed only in external devices that are connected to the monitor at the time.

### 11. INFO

Current picture information is displayed on the upper left corner of the screen.

### 12. EXIT

Exits from the menu screen.

### 13. Up-Down Left-Right buttons

Moves from one menu item to another horizontally, vertically or adjusts selected menu values.

### 14. AUTO / PRE-CH

#### PC mode

Adjusts the screen display automatically.

#### TV mode

This button is used to return to the previous channel immediately

### 15. (MagicBright)

#### PC Mode:

MagicBright is a new feature providing the optimum viewing environment depending on the contents of the image you are watching.

Then press the button again to circle through available preconfigured modes.

( Entertain ;æ Internet ;æ Text ;æ Custom )

### 16. DUAL I - II

STEREO / MONO can be operated depending on broadcasting type by using DUAL button on the remote control while watching TV.

### 17. SLEEP

Turns the monitor off after a pre-determined period of time.

### 18. P.MODE

When you press this button, current mode is displays on the lower center of the screen.

#### TV / Ext. / AV / S-Video Mode:

The Monitor has four automatic picture settings that are preset at the factory.

Then press the button again to circle through available preconfigured modes.

(Dynamic ;æ Standard ;æ Movie ;æ Custom)