

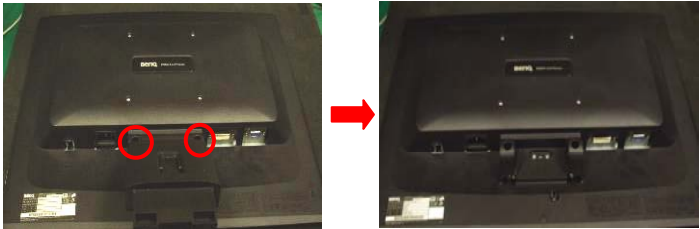
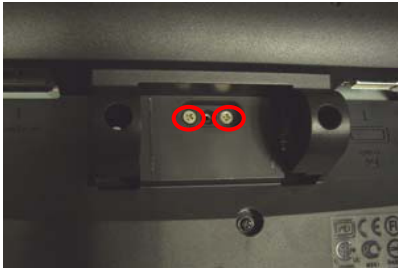






E900WA DISASSEMBLY FLOW

Preparation before disassembly:

- 1.Clean the room for disassembly;
- 2.Checking the position that the monitors be placed;
- 3.Prepare the implement, equipments as bellow:
 - ①forklift
 - ②working table
 - ③electronic screwdriver
 - ④static-free pad
 - ⑤glove
 - ⑥pinafore

Item	Operation	Tool	Picture	Notes
1	Put the monitor on the working table.	static-free pad		The static-free pad must be cleaned.
2	Disassembling the Singal Cable.	electronic screwdriver ("+")		Torque:1.2±0.3kg
3	Disassembling the column.	electronic screwdriver ("+")		Torque:9±1.0kg

4	Unscrew the screws of the backboard (1)	electronic screwdriver ("+")		Torque:6.0±1.0kg
5	Unscrew the screws of the backboard (2)	electronic screwdriver ("+")		Torque:5±1.0kg
6	unclose the BZL from the monitor with hand			
7	Disassembling the backboard from BZL.			
8	Take off the Ace Tape from panel			

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

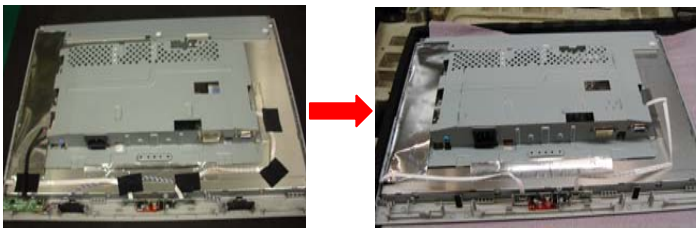
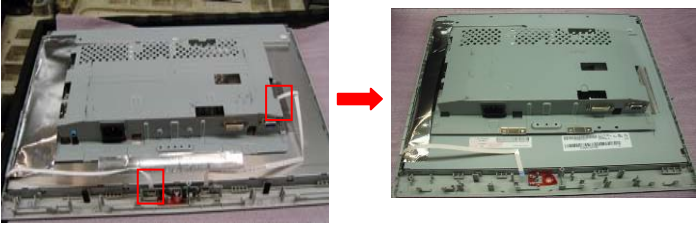

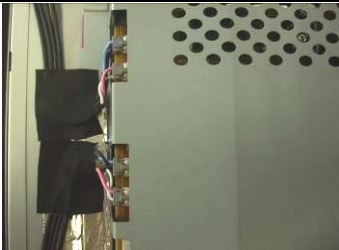
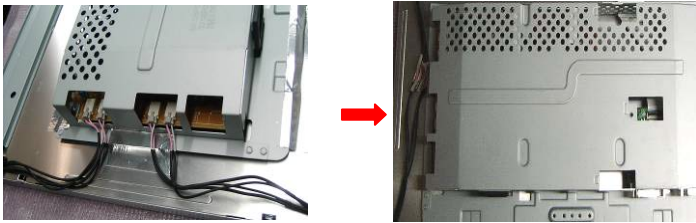
Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

9	<p>Disassembling the jack-board and SPK from BZL.</p> <p>①:Pull out the wire from Power BD</p> <p>②:Disassembling the jack-board</p> <p>③:Take off the jack-board and SPK from BZL.</p>	electronic screwdriver ("+")		<p>Remark: MODEL ACE/A8E must do this station,MODEL ASE no need</p>
10	<p>Disassembling the Led-board from BZL.</p> <p>①:Pull out the wire from I/F BD</p> <p>②:Pull out the wire from LED BD</p> <p>③:Take off the Led-board from BZL.</p>			
11	<p>Disassembling the control-board from BZL.</p>			
12	<p>Take off the big AL tape from panel</p>			
13	<p>Pull out the lighting wire from Power BD</p> <p>①:Take off the Ace Tape for lighting wire from panel</p> <p>②:Pull out the lighting wire from power BD</p>			

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01


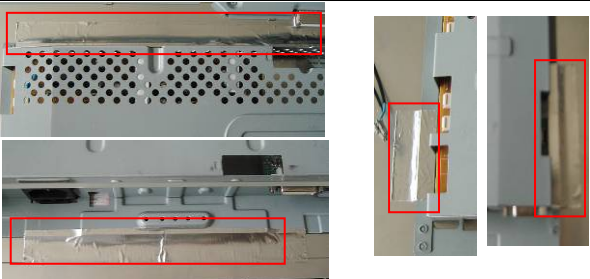
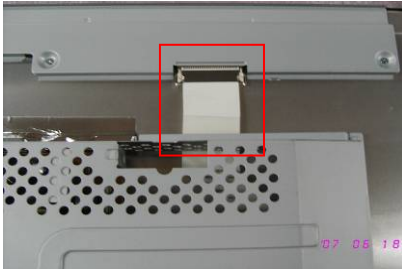
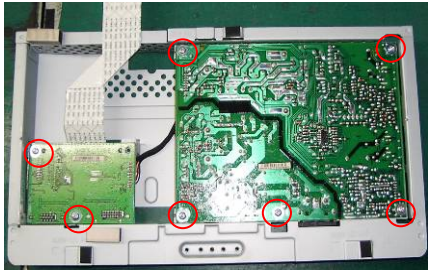
Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Com
20

14	Unscrew the screw	electronic screwdriver ("+")		Torque:5±0.6kg Remark: MODEL ASE/ACE must be unscrew four screws, MODEL A8E must be unscrew two screws
15	Take off four AL tapes			
16	Take off LVDS wire			
17	Unscrew the screw	electronic screwdriver ("+")		Torque:6-8kg

Comtech S
andreyk
2007/10/0

Com
20

Comtech S
andreyk
2007/10/0

Com
20

Comtech S
andreyk
2007/10/0

Com

Comtech S
andreyk
2007/10/0

2007/10/01

2007/10/01

2007/10/01

2007/10/01

2007/10/01

2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S.A.
andreyk
2007/10/01

Comtech S
andreyk
2007/10/0